

CSI Support Listing - IBM Communications - Front-end Processors, Controllers

| OEM | Machine Type | Model/ Feature | Description | Type |
|-----|--------------|----------------|----------------------------|---------------|
| IBM | 3088- | 001 | MULTISYSTEM CHAN COMM UNIT | Communication |
| IBM | 3088- | 002 | MULTISYSTEM CHAN COMM UNIT | Communication |
| IBM | 3088- | 0A1 | MULTISYSTEM CHAN COMM UNIT | Communication |
| IBM | 3172- | 001 | INTERCONNECT CONTROLLER | Communication |
| IBM | 3172- | 002 | INTERCONNECT CONTROLLER | Communication |
| IBM | 3172- | 003 | INTERCONNECT CONTROLLER | Communication |
| IBM | 3174- | 01L | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 01R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 02R | CONTROL UNIT | Communication |
| IBM | 3174- | 03R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 11L | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 11R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 12L | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 12R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 13R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 14R | NETWORKING SERVER | Communication |
| IBM | 3174- | 21H | ESTABLISHMENT CNTRL | Communication |
| IBM | 3174- | 21L | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 21R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 22L | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 23R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 24R | NETWORKING SERVER | Communication |
| IBM | 3174- | 51R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 52R | CONTROL UNIT | Communication |
| IBM | 3174- | 53R | CONTROL UNIT | Communication |
| IBM | 3174- | 61R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 62R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 63R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 64R | NETWORKING SERVER | Communication |
| IBM | 3174- | 81R | ESTABLISHMENT CONTROLLER | Communication |
| IBM | 3174- | 81S | CONTROL UNIT | Communication |
| IBM | 3174- | 82R | CONTROL UNIT | Communication |
| IBM | 3174- | 82S | CONTROL UNIT | Communication |
| IBM | 3174- | 90R | SUBSYSTEM CONTROL UNIT | Communication |
| IBM | 3174- | 91R | SUBSYSTEM CONTROL UNIT | Communication |
| IBM | 3174- | 92R | SUBSYSTEM CONTROL UNIT | Communication |
| IBM | 3174- | 95R | ESTABLISH CONTROLLER | Communication |
| IBM | 3274- | A01 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | A21 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | A31 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | A41 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | B01 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | B21 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | C01 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | C21 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | C31 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | C41 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | C51 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | C61 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | D01 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | D21 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | D31 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3274- | D41 | CONTROL UNIT (SNA VERSION) | Communication |
| IBM | 3725- | 001 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3725- | 002 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3726- | 001 | COMM EXPANSION UNIT | Communication |
| IBM | 3728- | 001 | COMM CONTROL MATRIX SWITCH | Communication |
| IBM | 3737- | 001 | REMOTE CHAN TO CHAN | Communication |

CSI Support Listing - IBM Communications - Front-end Processors, Controllers

| OEM | Machine Type | Model/ Feature | Description | Type |
|-----|--------------|----------------|---------------------------|---------------|
| IBM | 3745- | 130 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 150 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 170 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 17A | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 210 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 21A | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 310 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 31A | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 410 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 41A | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 610 | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3745- | 61A | COMMUNICATIONS CONTROLLER | Communication |
| IBM | 3746- | 900 | EXPANSION UNIT | Communication |
| IBM | 3746- | 950 | NWAYS MULTINETWORK CTRLR | Communication |
| IBM | 3746- | A11 | EXPANSION UNIT | Communication |
| IBM | 3746- | A12 | EXPANSION UNIT | Communication |
| IBM | 3746- | L13 | EXPANSION UNIT | Communication |
| IBM | 3746- | L14 | EXPANSION UNIT | Communication |
| IBM | 3746- | L15 | EXPANSION UNIT | Communication |
| IBM | 7318- | P10 | COMM. NETWORK SERVER | Communication |
| IBM | 7318- | S20 | COMM. NETWORK SERVER | Communication |
| IBM | 7855- | 010 | MODEM | Communication |
| IBM | 7855- | 018 | MODEM | Communication |
| IBM | 7855- | 01Z | MODEM | Communication |
| IBM | 7857- | 017 | MODEM | Communication |
| IBM | 7857- | 01Z | MODEM | Communication |
| IBM | 7861- | 014 | MODEM | Communication |
| IBM | 7861- | 015 | MODEM | Communication |
| IBM | 7861- | 016 | MODEM | Communication |
| IBM | 7861- | 01W | MODEM | Communication |
| IBM | 7861- | 01x | MODEM | Communication |
| IBM | 7861- | 024 | MODEM | Communication |
| IBM | 7861- | 025 | MODEM | Communication |
| IBM | 7861- | 026 | MODEM | Communication |
| IBM | 7861- | 045 | MODEM | Communication |
| IBM | 7861- | 046 | MODEM | Communication |
| IBM | 7861- | 047 | MODEM | Communication |
| IBM | 7866- | 001 | RACK MOUNT - MODEM | Communication |
| IBM | 7868- | 45 | MODEM - RACK MOUNT | Communication |
| IBM | 7868- | 46 | MODEM - RACK MOUNT | Communication |
| IBM | 7868- | 47 | MODEM - RACK MOUNT | Communication |
| IBM | 7868- | 024 | MODEM - RACK MOUNT | Communication |
| IBM | 7868- | 025 | MODEM - RACK MOUNT | Communication |
| IBM | 7868- | 026 | MODEM - RACK MOUNT | Communication |